BAUHN®
EFFORTLESS TECHNOLOGY

7” Colour eBook Reader and Media Player

Model Number: EB39678

INSTRUCTION MANUAL

After Sales Support
Telephone: 1300 663 907
Internet: www.winplus.com.au

N14410

BAUHN®
EFFORTLESS TECHNOLOGY

7” Colour eBook Reader and Media Player

Warranty Details

The product is guaranteed to be free from defects in workmanship and parts for a period of 12 months (dependant on product) from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

1 YEAR WARRANTY

After Sales Support
Telephone: 1300 663 907
Internet: www.winplus.com.au

7" Colour eBook Reader and Media Player
Product Features

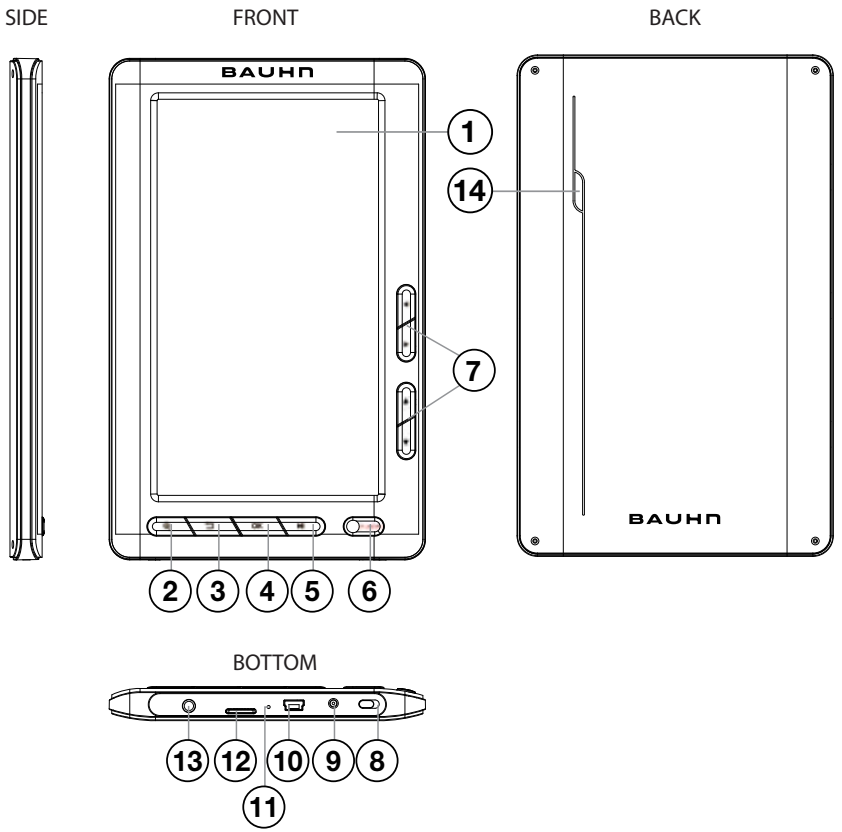

1. LCD Screen
2. Magnify Button: Press to adjust the size of eBook text and fonts
3. Back Button: Use the back button to exit videos, eBooks or return to previous menu
4. OK Button: Use to make menu selections or select files
5. Play / Pause / Record Button: Play or pause audio / video files and record audio
6. Power Button: Turn the eBook on or off
7. Directional Buttons: Use to navigate menus, advance between audio / video files and adjust the playback volume
8. ON/OFF Switch: Set to OFF position to prevent accidentally turning the eBook ON or OFF
9. DC Input: Power adaptor input for external power supply (not included)
10. USB Port: Connect USB cable to charge and transfer files
11. Microphone: Built in microphone for recording audio
12. MicroSD Card Slot: External storage slot for MicroSD cards up to 32GB (not included)
13. Headphone Jack
14. Speaker

Contents

Warranty	i
7" Colour eBook Reader and Media Player Product Features	ii
Welcome	1
General Safety Instructions	1
Parts List	2
Technical Specifications	2
Instructions	3-9
Tips & Troubleshooting	10
Repair and Refurbished Goods or Parts Notice	11

After Sales Support
Telephone: 1300 663 907
Internet: www.winplus.com.au

Welcome

Congratulations on choosing to buy a BAUHN® product. By doing so you now have the assurance and peace of mind that comes with purchasing a product made by one of the leading manufacturers. All products brought to you by BAUHN® are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 1 Year Warranty. We hope you will enjoy using your purchase for many years to come.

General Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with the warranty card, purchase receipt and carton. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. **Follow all instructions and take notice of all warnings to reduce the risk of fire or electric shock.**

- Do not expose this product to water, rain, moisture or dust. Electronic products of this kind should never be subjected to moisture or extreme temperatures.
- Do not remove the cover or the back of this product. There are no user-serviceable parts inside this product.
- Do not repair the unit yourself. Only have it serviced by qualified personnel.
- Supervise young children to ensure they do not play with the product.
- Do not expose the product to dripping or splashing liquids.
- Do not place the product near other items that may damage it, such as naked flame sources (lit candles) or objects containing water.
- Avoid banging objects against or dropping the eBook Reader
- Do not place or use near magnets
- Avoid using in dusty or extremely humid conditions
- Do not expose to direct sunlight for long periods of time

Parts List

- 7" Colour eBook Reader and Media Player
- Premium Protective Case
- USB Cable
- Earphones
- Instruction Manual
- Getting Started Guide
- Warranty Card
- Warranty Stickers

Technical Specifications

Display:	7" TFT LCD
Resolution:	800 x 480
Internal Memory:	4GB
MicroSD cards supported:	up to 32GB (not included)
MicroSD card file system:	FAT32
Supported Audio Formats:	MP3, WMA, FLAC, AAC, WAV, OGG
Supported eBook Formats:	PDF, EPUB, FB2, TXT, MOBI, HTM, PDB, RTF, LRC
Supported Video Formats:	MPG, RMVB, FLC, ASF, WMV, MP4, 3GP, RM, AVI, DATA
Supported Image Formats:	BMP, JPG, GIF, PNG
Battery Type:	Rechargeable Li-ion
Power Input:	500mA – 1500mA
Recharging time:	6 hours at 500mA (via USB), 3 hours at 1000mA
Product Size:	13mm x 124mm x 195mm
Product Weight:	287g

Instructions

Charging the 7" Colour eBook Reader and Media Player

Before using the eBook for the first time, charge the unit for at least 6 hours before first use

1. Insert the USB cable to the USB input on the bottom of the eBook
2. Connect the other end of the eBook to your PC or USB wall charger (not included)
3. Charge for approximately 3-6 hours.

Tip: If charging via USB, 1 hour of charging equals roughly 1 hour of reading usage

Important Note: If you battery appears to drain quickly, turn down brightness settings and change the LightTime feature to 90 seconds or less. Also note, watching videos will drain the battery much faster than reading an ebook

Turning the eBook ON or OFF

1. Change the ON/OFF switch to the ON position
2. Push the POWER button to toggle power on or off

TIP: When transporting or not using the eBook, change the ON/OFF switch to the OFF position to prevent accidentally turning it on and draining the battery

Transferring files to the eBook via PC

1. Connect the eBook to your PC using the USB cable
2. When the eBook is plugged in to a USB port on your computer the AutoPlay screen will appear in WINDOWS. Click "Open folder to view files". If you do not see the AutoPlay popup, click on START > Computer and find the BAUHN EBOOK folder. For Mac users, plug in the USB cable and the BAUHN EBOOK icon will appear on your Desktop

Instructions

Transferring files to the eBook via PC (Cont.)

3. The Bauhn eBook folders will appear on your screen. Copy and paste your favourite eBooks, music, video or photos into their respective folders

Digital Editions 8/8/2008 8:08 PM File folder
EBOOK 4/27/2012 2:51 PM File folder
MUSIC 4/27/2012 3:05 PM File folder
PHOTO 4/27/2012 3:05 PM File folder
RECORD 8/8/2008 8:08 PM File folder
VIDEO 4/27/2012 3:05 PM File folder

NOTE: See technical specifications for supported file types

Transferring files to the eBook via MicroSD

1. Format your MicroSD card to FAT32 standard
2. Transfer your favourite files to the MicroSD card
3. Insert the MicroSD card into the TF CARD slot on the eBook
4. Select the "Explore" function in the main menu
5. Select TF CARD
6. Choose the media file you would like to open

Instructions

Main Menu Interface

1. Battery indicator – displays the current battery level or charging status
2. Date & time – displays the currently set date and time
3. Browser History – shortcut to the last 10 eBooks opened including the last page read
4. eBook – opens the eBook library screen
5. Music – opens the music library screen
6. Video – opens the video library screen
7. Radio - Listen to FM radio stations
8. Explorer – manually navigate to all files, also used to access the MicroSD card files
9. Record – access the voice recorder
10. Photo – view your photo gallery
11. Game – play a basic block drop game
12. Settings – access your eBook settings

Instructions

Browser History:

- View the last 10 ebooks opened
- Press OK to select an eBook and jump to last page read

Reading an eBook:

The Bauhn eBook Reader and Media Player supports the following file types, PDF, EPUB, FB2, TXT, MOBI, HTM, PDB, RTF, LRC. See the section Transferring files to the eBook via PC to learn how to load eBooks on to your eBook Reader

1. Select the eBook option from the main menu
2. Sort your eBook library by File Name, Title, Author, Directory or Thumbnail
3. Select the eBook you would like to open and press OK
4. Press the ⮌ to exit the eBook

Adjusting the eBook Text Size:

1. While reading an eBook, press the 🔍 button to open the text size menu
2. Select the text size you would like to scale to and press OK

Advanced eBook Options Menu:

To access the advanced options, press the OK button when viewing an eBook

- Page Jump: Set the page number you would like to skip to
- SaveMark: Create a bookmark on the currently viewed page
- LoadMark: Access your saved bookmarks
- DelMark: Delete your saved bookmarks
- Browser Mode: Turn the auto scrolling feature on or off
- Flip Time: Set the auto scrolling speed when enabled
- Brightness: Set the backlight brightness
- Font Set: Change the text font used
- Information: View the current eBook information such as title, author, date of publication etc.
- Table of contents: View the eBook table of contents (dependant on eBook)

Listening to Music / Audio Files

The Bauhn eBook Reader and Media Player supports the following file types, MP3, WMA, FLAC, AAC, WAV, OGG. See the section Transferring files to the eBook via PC to learn how to load audio files on to your eBook Reader

1. Select the Music option from the main menu
2. Sort your music by All Music, Artist, Album, Genre, My Favourites, Recordings or by Directory
3. Highlight the audio file you wish to play and press OK, the file will begin playing

Instructions

Listening to Music / Audio Files (cont.)

4. Press the ⏯ button to toggle play / pause
5. Press the left and right arrows to skip songs
6. Press the up and down arrows to adjust the volume
7. Press the ↩ to return to the previous menu

Advanced Music Options

To access the advanced options, press the OK button when listening to an audio file

- Repeat Mode: Choose from various song and album repeat options
- Play Mode: Turn shuffle on or off
- EQ Sel: Choose from multiple preset audio modes including Rock, Jazz, Classical etc.
- User EQ Setup: Customize your own equalization settings
- Display: Turn lyric display on or off (if supported by file)

Watching Video Files

The Bauhn eBook Reader and Media Player supports the following file types, MPG, RMVB, FLC, ASF, WMV, MP4, 3GP, RM, AVI, DATA. See the section Transferring files to the eBook via PC to learn how to load video files on to your eBook Reader

1. Select the Video option from the main menu
2. Select the directory your video files have been saved to. Generally these should be in the "VIDEO" directory
3. Select the video file you would like to watch
4. The video will begin to play in widescreen mode
5. Press the ⏯ button to toggle play / pause
6. Press the left and right arrows to skip to the next video file or hold down the left and right arrows to fast forward the current video
7. Press the up and down arrows to adjust the volume
8. Press the ↩ to return to the previous menu

Advanced Video Options

To access the advanced options, press the OK button when viewing a video file

- Subtitle Language: Change the language of subtitles if supported by the video file
- Select Time Play: Advance video to the selected time
- Screen Size: Choose from Full screen, Normal or Original Screen size
- Brightness: Adjust the screen brightness

Instructions

Radio

The Bauhn eBook has a built in FM radio receiver

1. Select Radio in the main menu
2. Plug in a set of earphones into the headphone jack.
   NOTE: the earphones will act as your radio antenna and must be used for effective reception
3. Press left and right to adjust the station preset or manual search
4. Press the up and down buttons to adjust the volume
5. Press the ↩ button to return to the previous menu

Advanced Radio Options

To access the advanced options, press the OK button while in Radio mode

- Search By Hand: Change the station search mode to manual. The left and right arrows will increase or decrease in 0.1 increments
- Auto Search: Select this option to automatically scan for radio stations
- Preset Mode: Select this option to scan by preset. The left and right arrows will skip to only your preset stations
- Save Channel: Choose this option to manually save the current station into the presets. Select an open slot to save a channel
- Delete Channel: Choose this option to manually delete a saved preset station
- Stereo Switch: Turn Stereo on or off. The default is on
- Region: Set the current region. Australia is the default
- FM Record: Record the current FM station

1. Press the OK button to access the quality and volume settings of the recording
2. Press the ⏯ button to begin recording
3. Press the ↩ button to stop and save a recording

Recording Audio (via built in microphone)

1. Select the Record function in the main menu
2. Press the OK button to access the Quality and Volume settings for the recording
3. Press the ⏯ button to begin a recording
4. Press the ⏯ again to pause the recording
5. Press the ↩ button to finish the recording
6. Select Yes to save the recording
7. To playback your recordings, open the Music function from the main menu and select the "Record" option to open your recordings

Instructions

Viewing Photos

The Bauhn eBook Reader and Media Player supports the following file types, BMP, JPG, GIF, PNG. See the section Transferring files to the eBook via PC to learn how to load photo files on to your eBook Reader

1. Select the Photo option from the main menu
2. Select the directory your photos files have been saved to. Generally these should be in the "PHOTO" directory
3. Select the image file you would like to view
4. Press the left and right arrows to skip to the next image file
5. Press the button to toggle the image zoom feature
6. Press the OK button to access the slideshow options
7. Press the to return to the previous menu

Explorer Mode:

To manually navigate to the file you would like to load, use the Explorer option. Use this option if you would like to access files on your MicroSD card. Explorer mode will allow you to choose any file type supported

Game Feature

Select Game from the main menu to open the block drop game

Controls:

- OK to start a game
- Left / Right arrows to move left and right
- Down arrow to drop a block
- OK to rotate blocks
- button to pause the game, but that's cheating
- button to exit the game

Settings Menu

The Settings Menu will allow you to customize your eBook Reader with functions such as display, date, time, language etc.

Display

- LightTime: Adjust the length of time the backlight stays on
- Brightness: Adjust the backlight brightness

Instructions

System Setting

- Reset to Default: Restore the eBook to factory settings
- Key Lock Time: Set the keys to lock after the specified of time

Language:	Set the display language
System Information:	Displays the hardware and software information of the eBook
AutoShut Time:	Set the auto shutdown timer
Time:	Set the current time
Calendar:	Set the current date
Calculate:	Access the basic calculator

Tips & Troubleshooting

Problem	Solution
The eBook will not turn on	1. Charge the eBook Reader via USB 2. Unplug once charged 2. Turn the ON-OFF switch to ON 3. Press and hold the power button
The eBook reader won't read my MicroSD card	Make sure the card is formatted to the FAT32 file system
Where do I download ebooks?	You can download ebooks from Project Gutenburg Australia, Google Play and Kobo
Can I use a power adaptor or buy one from my local store?	Yes, you can use a power adaptor or charger with the Bauhn eBook Reader provided the adaptor is rated 5V, 500-1500mA. If an adaptor outside of this rating is used you may damage the eBook and void your warranty
I can't find my files I put on my MicroSD card	1. Make sure the MicroSD card is fully inserted 2. Select the Explore option from the main menu 3. Select the TF Card option 4. Choose the file you would like to load
How do I create a bookmark?	When you are on the page you would like to save, press the OK button > SaveMark > Select an Empty page space
The battery only lasts a few hours	Turn down the brightness and change the LightTime to 90s or less to conserve battery power. Note, video and audio will drain the battery much quicker than reading an eBook

BAUHN®
EFFORTLESS TECHNOLOGY

7" Colour eBook Reader and Media Player

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost. We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300 663 907 or write to us at:

WINPLUS AUSTRALASIA
PO BOX 537
BAYSWATER BUSINESS CENTER VIC 3153

WINPLUS HELP DESK: 1300 663 907

EMAIL: customercare@winplus.com.au

1 YEAR WARRANTY

BAUHN®
EFFORTLESS TECHNOLOGY

After Sales Support
Telephone: 1300 663 907
Internet: www.winplus.com.au